Exhibit A

RP Photonics CONSULTING GmbH

Encyclopedia of Laser Ph

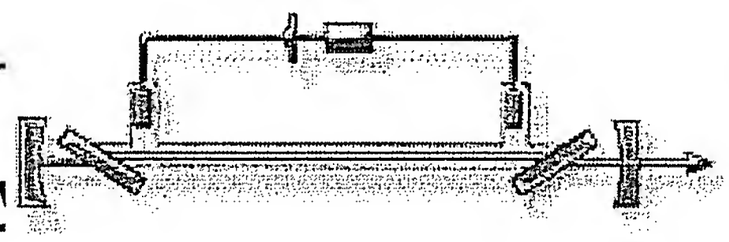

part of the Virtual Library

© Dr. Rüdiger Paschotta
Last update: 2008-07-15

Home	New articles	Spotlight	Feedback	Advertising
Categories	Search	Quiz	Links	Page hits

A	B	C	D	E	F	G	H	I	J	K	L	M
N	O	P	Q	R	S	T	U	V	W	X	Y	Z

Relative Intensity Noise

previous | next | feedback

Acronym: RIN

Definition: noise of the optical intensity (or actually power), normalized to its average value

In the context of intensity noise (optical power fluctuations) of a laser, it is common to specify the *relative intensity noise* (RIN), which is the power noise normalized to the average power level. The optical power of the laser can be considered to be

$$P(t) = \bar{P} + \delta P(t)$$

with an average value and a fluctuating quantity δP with zero mean value. The relative intensity noise is then that of δP divided by the average power; in the following, this quantity is called I. The relative intensity noise can then be statistically described with a power spectral density (PSD):

$$S_I(f) = \frac{2}{\bar{P}^2} \int_{-\infty}^{+\infty} \langle \delta P(t)\, \delta P(t+\tau) \rangle \exp(i 2\pi f \tau)\, d\tau$$

which depends on the noise frequency f. It can be calculated as the Fourier transform of the autocorrelation function of the normalized power fluctuations (see the equation), or measured e.g. with a photodiode and an electronic spectrum analyzer. (The factor of 2 in the formula above leads to a one-sided PSD as usually used in the engineering disciplines.) The units of this RIN PSD are Hz^{-1}, but it is common to specify 10 times the logarithm (to base 10) of that quantity in dBc/Hz (see also: decibel). The PSD may also be integrated over an interval $[f_1, f_2]$ of noise frequencies to obtain a root mean square (r.m.s.) value of relative intensity noise

$$\left.\frac{\delta P}{\bar{P}}\right|_{rms} = \sqrt{\int_{f_1}^{f_2} S_I(f)\, df}$$

which is then often specified in percent.

This encyclopedia is provided by **RP Photonics Consulting GmbH.**

You can get **technical consulting** from the author, **Dr. Rüdiger Paschotta.**

RP Fiber Power 2.0

This software is a powerful tool for designing **fiber amplifiers** and **fiber lasers.** See the **comprehensive description!**

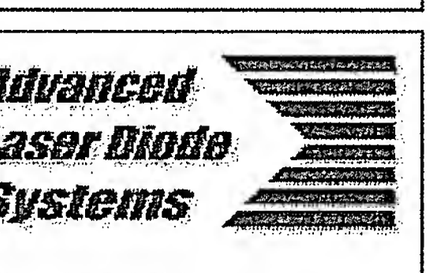

Onefive

Low-noise **femtosecond, picosecond, and tunable single-frequency** lasers for OEM and R&D applications.

Field Guide to Lasers

This compact book by Dr. Paschotta explains principles and types of lasers.

HIGH Q LASER®

A leading supplier of all-diode-pumped **picosecond and femtosecond laser** and **amplifier systems** for scientific, medical and industrial markets.

A.L.S. GmbH

Picosecond laser diodes <30 ps, 375 – 1600 nm, >1 W_p, single shot – 120 MHz

Your Advertisement at This Place

will be seen by many thousands of visitors per month. These banners receive far over 100'000 page hits per month. Check the details.

Note that it is not sensible (although common) to specify relative intensity noise in percent (e.g. as ±0.5%) without clarifying whether this means an r.m.s. value or something else. See the article on noise specifications for more such details.

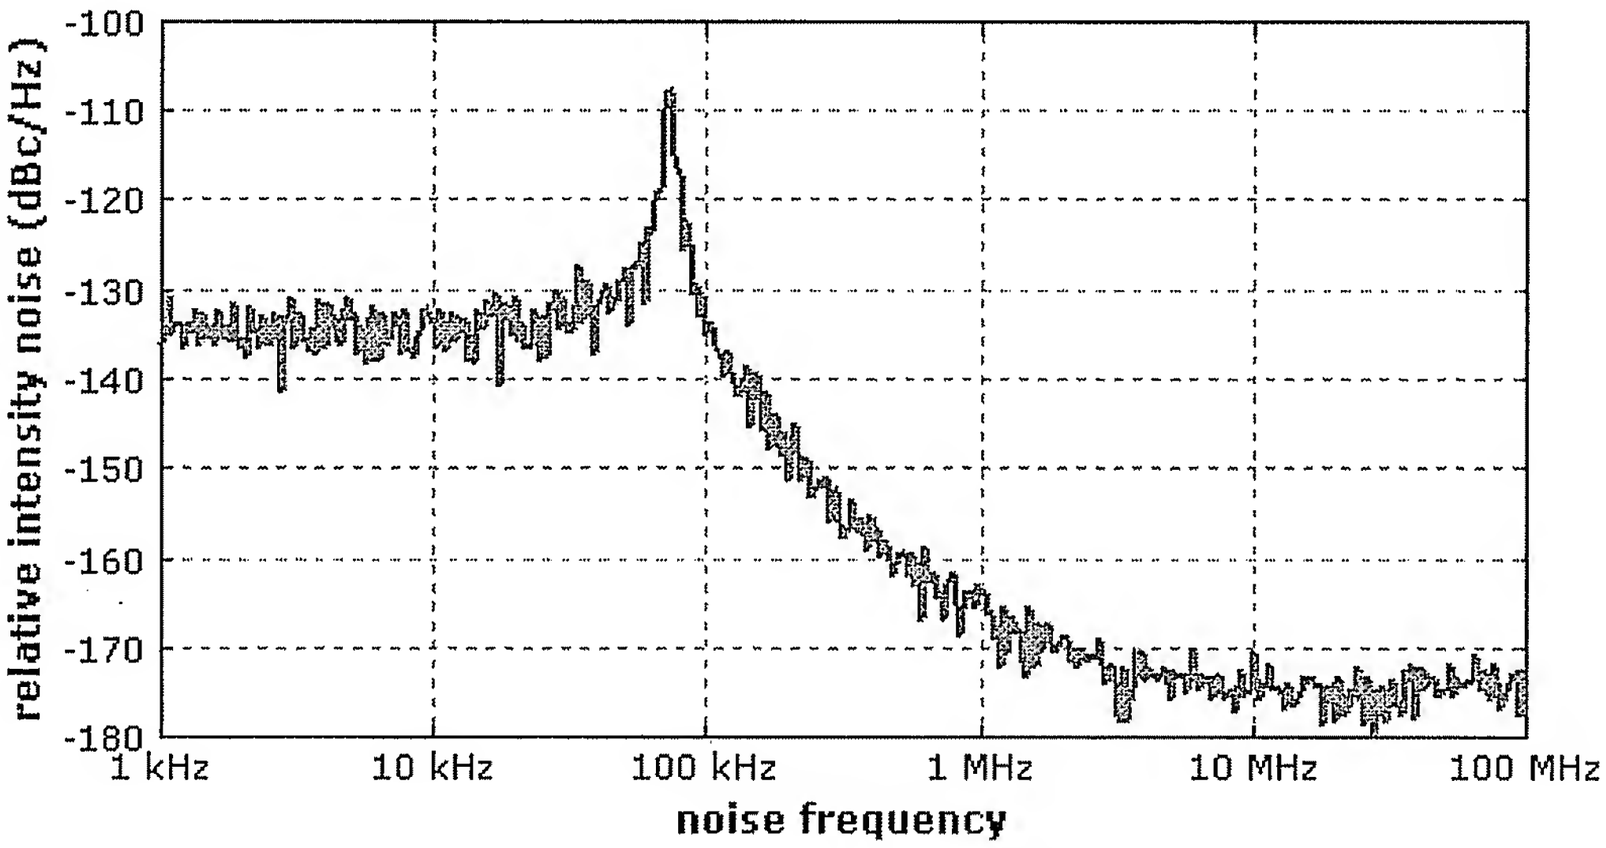

Figure 1: Simulated relative intensity noise spectrum of a 1064-nm Nd:YAG laser with 100 mW average output power. The shot noise level of −174 dBc/Hz is reached above 5 MHz. There is also a pronounced peak from relaxation oscillations, and excess noise at low frequencies introduced by the pump source.

RIN from Shot Noise

It might be expected that the amount of RIN of a laser beam will remain constant when the beam is subject to linear attenuation. This is not true, however, when the RIN is limited by shot noise. In that case, the RIN is given by

$$S_{I,\mathrm{sn}}(f) = \frac{2h\nu}{\bar{P}}$$

As an example, a 1-mW laser beam at 1064 nm with intensity noise at the shot noise limit has a RIN of $3.73 \times 10^{-16}\,\mathrm{Hz}^{-1}$ or −154 dBc/Hz.

This PSD is independent of noise frequency (*white noise*), and it increases with decreasing average power. This can be understood as the introduction of additional quantum noise in the attenuation process.

Quantum-limited RIN measurements should be done by detecting the entire laser power e.g. with a photodiode, while minimizing the influence of excess noise (e.g. thermal noise) from the electronics.

See also: intensity noise, noise specifications, quantum noise

Categories: fluctuations and noise, lasers

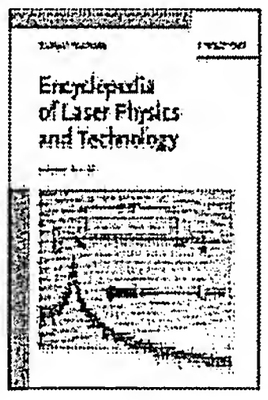

Since October 2008, the Encyclopedia of Laser Physics and Technology is also available in the form of a **two-volume book**. Maybe you would enjoy reading it also in that form! The print version has a carefully designed layout and can be considered a must-have for any institute library, laser research group, or laser company.

You may order the print version via Wiley-VCH.